

type (BevelPosType)

b2bOpticJobData → items → item → pair → edging → bevel → position

values	description
AUTO	the position is calculated by the lens manufacturer
FRONT	distance to front side; unity of position is mm
BACK	distance to back side; unity of position is mm
RELATION	the relation of distance between front and back; unity of position is percent
FRAMECURVATURE	
FRAMEBASE	

```
<xssimpleType name="BevelPosType">
  <xsrrestriction base="xs:string">
    <xsenumeration value="AUTO" />
    <xsenumeration value="FRONT" />
    <xsenumeration value="BACK" />
    <xsenumeration value="RELATION" />
    <xsenumeration value="FRAMECURVATURE" />
    <xsenumeration value="FRAMEBASE" />
  </xsrrestriction>
</xssimpleType>
```

From:
<https://wiki.b2boptic.com/> - **wiki.b2bOptic.com**

Permanent link:
<https://wiki.b2boptic.com/en:jobdata:version010603:simpletypes:bevelpostype>

Last update: **2017/06/19 18:14**

